

For More Shining Ideas

### EinScan Pro HD Multifunctional Handheld 3D Scanner



# **Quick Start Guide**

Getting Started with EinScan Pro HD

# **Preparation**

### **Device List**

#### Standard Pack



- 1. Plug in dongle before opening Solid Edge software
- 2. Find the use of phone screen mount in Support-Help at www.einscan.com

#### Industrial Pack (optional)

Cable clip

Industrial Pack (optio	nai)	
Turntable	Tripod	Scanner tray
	8-0-	
USB cable	Power adapter	Power cable

#### Color Pack (optional)



\*Please only use water to clean the calibration board, avoid touching any corrosive liquid.

# **Preparation**

### Recommended

Graphics Card

Memory

Interface

Grapines cara	TVIDIA GTA1000 una migner	
Video Memory	>4G	
Processor	17-8700	
Memory	64G	
Interface	high-speed USB 3.0	
Required		
Graphics Card	Quadro card P1000 and higher or NVIDIA GTX660 and high	
Processor	Intel (R) xeon E3-1230, Intel (R) I5-3470, Intel (R) I7-3770	


high-speed USB 3.0

NVIDIA GTX1080 and higher

# Installation

Hardware Installation


### 1. Standard Pack

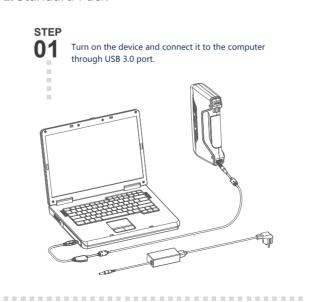


# Installation

### Hardware Installation

### 2. Industrial Pack

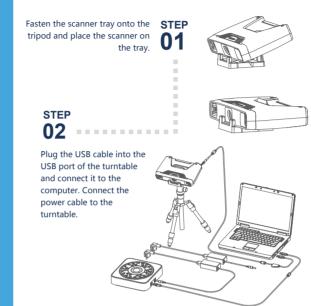

#### 3. Color Pack

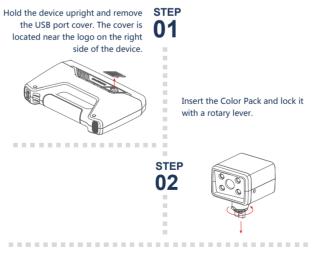

### 4. Operation Environment

Avoid direct sunlight or too bright of light indoors. Make sure the scanned object and table are stable. (For Fixed Scan)

### **Software Installation**

### Software Download

Download the software and user manual from www.einscan.com/support/download/

### Run the installer STEP

Double click software installation 01 icon to install the software.



#### License Activation STEP

. . . . . . . . . . . . . . . . . . .

After successful installation, when 02 the device is correctly connected, double-click to open the software and activate the device. The format of activation is "online activation" . Make sure your computer is connected to the

Online Activation

..................

Or do local activation and find the license in the USB drive.

Local Activation

. . . . . . . . . . . . . . . . . . . .

Attention: If you install another device of different serial number, the software will automatically notify users to activate this device.

Online Activation

Local Activation

## **Calibration**

# Camera Calibration STEP

-----

Follow the instruction on the software to place the calibration board in 5 different positions. Hold the scanner vertically and cover the screen range.



















. . . . . . . . . . . . . . . . . . .







.......

### **Calibration**



### White Balance Calibration

Only required for Color Pack


Hold the scanner vertically to the back side of calibration board (white) and adjust the distance until you find the proper distance.

The first time installing the software, calibration is required by default. Calibration is also required for the following:


...........

- 1.Device Change
- 2.After device enduring bumpy transportation
- 3.After device accuracy decreases
- 4.Device being uncalibrated for a long time, for example, 15 days.
- 5. When using the Color Pack, the texture camera's position has been changed.


## **Fixed Scan**

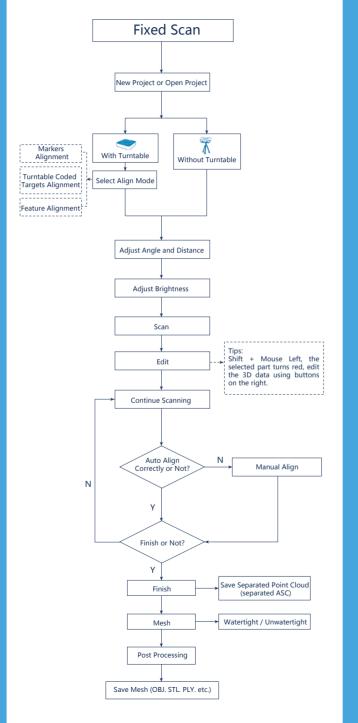

### Handheld HD Scan

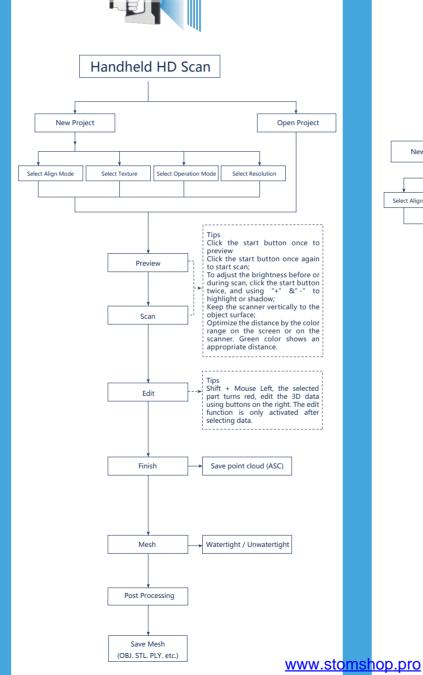

# **Handheld Rapid Scan**

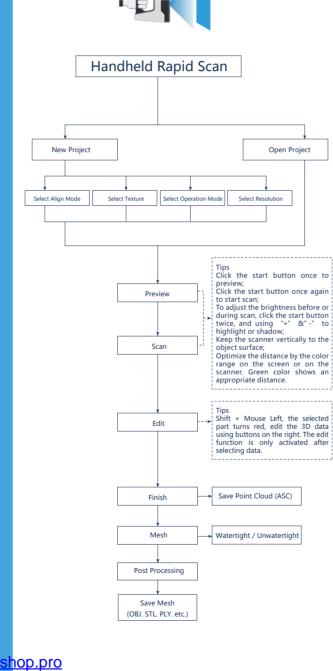

# **Scanning Tips**

#### Scan Mode Selection

Use Handheld Rapid Scan mode when

A fast scanning experience is needed;

Objects with good geometry for feature alignment;

Objects are hard to move or too big to stay on turntable for scanning.

High accuracy and high resolution by handheld scanning is required;

Objects are hard to move or too big to stay on turntable for scanning.

Use Fixed Scan with Turntable mode when: High accuracy and high resolution is required;

Objects' footprint within Ø 150mm which may not cover most coded targets

Weight under 5kg;

Objects' footprint above Ø150mm with rich geometry features can also work in Fixed Scan with Turntable mode through feature alignment.

Use Fixed Scan without Turntable mode when:

High accuracy and high resolution is required;

Objects is too big or heavy to work on turntable

# **Summary**

Mode	Accuracy ( mm )	Scan Efficiency	Resolution Point distand ( mm )	ce Align Mode
Fixed Scan with Turntable	Single Shot Accuracy 0.04 దాదాదాదాదాదాదాదాదాదాదాదాదాదాదాదాదాదాదా	Single Scan < 0.5s	0.24 公公公公	Turntable Coded Targets, Feature, Markers, Manua
Fixed Scan without Turntab	Single Shot Accuracy 0.04 lle 公公公公公	Single Scan < 0.5s	6 0.24 公公公公	Feature, Markers, Manua
Handheld HD Scan	Up to 0.045 +0.3 mm/m (markers alignment)	10 fps 3,000,000 points/s ជាង់ជាង់ជា	0.2-3 ជាជាជាជាជាជា	Markers, Feature (with rich geometrical features on the surface), Hybrid(Markers and Feature)
Handheld Rapid Scan	Up to 0.1 +0.3 mm/m (markers alignment) ☆☆☆	30 fps 1,500,000 points/s ជាស់ជាជាជា	0.25-3 公公公	Markers, Feature (with rich geometrical features on the surface), Hybrid(Markers and Feature Texture (with rich texture)



### Difficult to Scan

- Transparent objects like glasses
- Shining or highly reflective objects like mirrors



#### Solution

Spray with white powder



#### Not Recommended

- Moving objects or vibrating objects
- Lattice structure with many small deep holes
- · Hairy objects like human hair and fur



### **Technical Support**

**APAC Headquarters** 

SHINING 3D Tech. Co., Ltd.

Email: sales@shining3d.com

Hangzhou, China

P: +86-571-82999050

Register at support.shining3d.com for support Or contact through:

Email: einscan\_support@shining3d.com Skype: einscan support

### **EMEA Region**

111-111-1111-1111-1111-111-111-111-111-1

SHINING 3D Technology GmbH. Stuttgart, Germany P: +49-711-28444089 Email: sales@shining3d.com Breitwiesenstraße 28, 70565 No. 1398, Xiangbin Road, Wenyan, Stuttgart, Germany Xiaoshan, Hangzhou, Zhejiang, China,

#### **Americas Region**

SHINING 3D Technology Inc San Francisco, United States P: +1415-259-4787 Email: sales@shining3d.com 1740 César Chávez St. Unit D. San Francisco, CA 94124

www.shining3d.com

www.einscan.com